


Configuring the iView NTP Protocol

Introduction:

NTP stands for Network Time Protocol and is used to synchronise time across an IP network. It is mainly used to synchronise the HMI with the server so that there will not be any time difference.


Panel Setup Configuration

On the Panel Setup screen, click on the “FTP, VNC Email NTP” button to enter the NTP settings page.

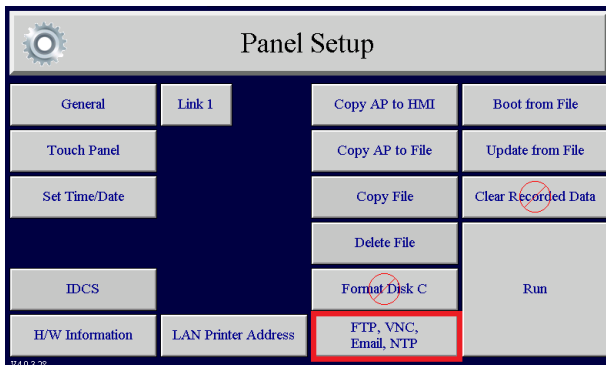

Once you are on the NTP settings page, the user needs to complete the following steps:-

1. Enable: Set the NTP to “True”
2. Server: Enter the url of the NTP server or the static IP address of the server
3. Interval To Get Time: select the frequency of how often the HMI will check and update the RTC time from the server
4. Convert UTC To Local Time: User can select True or False depending upon requirement
5. Click OK to save settings

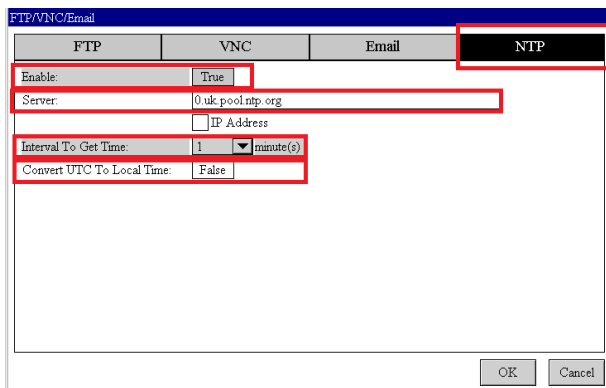

www.imopc.com

IMO Precision Controls Ltd

Unit 3, The Interchange, Frobisher Way
Hatfield, Hertfordshire AL10 9TG UK

Tel: +44 (0)1707 414 444
Fax: +44 (0)1707 414 445

Email: sales@imopc.com
Web: www.imopc.com



Bespoke technical training courses
available at our Hatfield training facility.
Call 01707 414 444 for more information